

thermo Sphere

CONTROL | TOUCH

SINGLE PROGRAMMABLE



Excellence in heating **solutions.**

Contents

Compatibility	3
What's in the box?	4
Before you start	5
Installing your thermostat	6
Wiring diagram	10
User interface	14
Set the time and date	15
Heating modes	16
Heating schedule	18
Settings	20
Technical data	22
Factory reset & key lock	23

Compatibility

This thermostat is compatible with ThermoSphere NTC 10K floor sensor probes.

NTC 10k Ω @ 25°C

If you have an existing floor probe from another thermostat that is not compatible, set your thermostat to ambient temperature sensing mode.

(Not advisable for timber or other temperature sensitive floors).

Replacing an existing thermostat?

Contact the manufacturer's technical department and ask for the rating of the floor sensor at 25°C.

What's in the box?

Check you've got everything:

- Programmable thermostat
- Floor sensor probe (3m)
- Floor sensor conduit (2m)
- Fixing screws
- Installation guide and warranty information
- Portrait mounting plate

You will also need:

- Electrical screwdriver
- Deep electrical back box
- Electrical test meter

Before you start



Your thermostat should be:

- Installed 1.2 - 1.5m from the floor
- On an internal wall
- Outside any wet zones (IP30)
- Installed on an RCD protected circuit
- Away from drafts or heat influences
- Installed so that the floor sensor probe can be laid in a heated area of the floor
- Installed by a professional, in line with current electrical regulations and relevant local standards


Installing your thermostat

1. Switch off mains power

You will be installing your thermostat as part of a high voltage mains electrical circuit. To ensure your safety and to protect the thermostat, switch off the mains power and remove fuse from the spur before you start the installation.

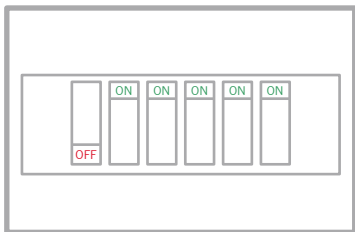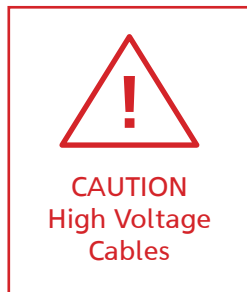

Fuse Box

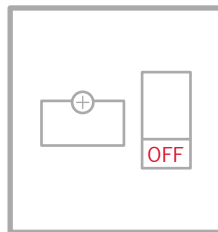

Fused Switch

Installing your thermostat

2. Installation location

At this stage it is likely that an RCD protected electric underfloor heating system has been installed and a back box is already in place.

The underfloor heating cold tail should be pulled up through the back box, and the sensor probe installed (in the conduit provided) within the wall cavity or pre chased channel in a solid wall.

Installing your thermostat

3. Maximum distances

Your thermostat can be installed up to 50m away from the underfloor heating system it is controlling, provided that the floor sensor is used to control the temperature.

Underfloor heating cold tails and floor sensor probes can be extended up to 50m.


Connect multiple heaters in parallel.



Installing your thermostat

4. Release mounting plate

Use a flat screwdriver to press is the catch and push the fascia down as shown to release the clips holding the back plate and the thermostat fascia together. Disconnect the white ribbon cable.

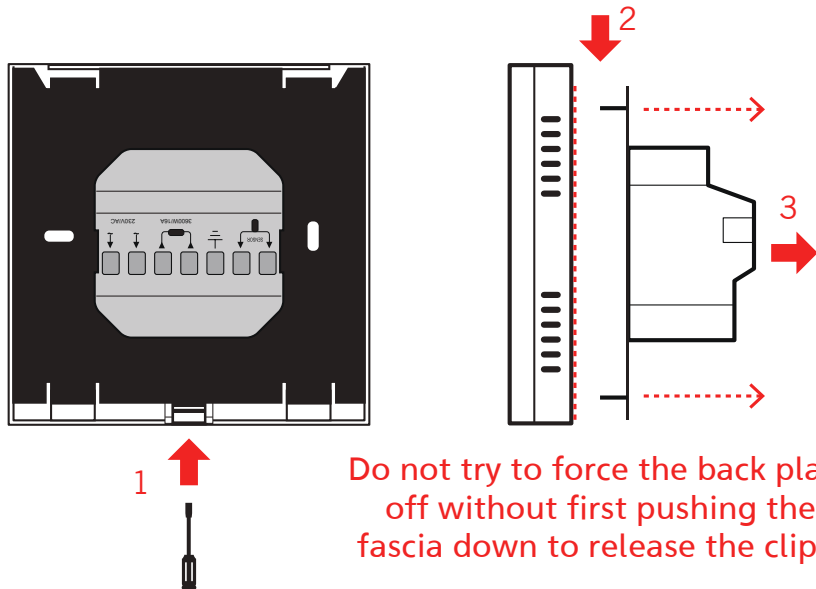


Do not try to force the back plate off without first pushing the fascia down to release the clips!

Installing your thermostat

5. Wiring diagram

Connect the Thermostat to the underfloor heating (UFH) cold tail, power supply and floor temperature sensor.


The floor temperature sensor is not polarity sensitive.

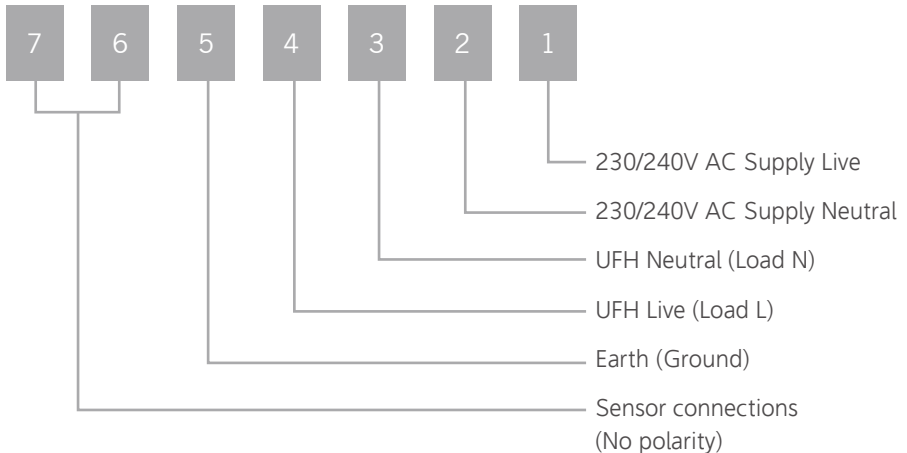

Installing your thermostat

6. Fix mounting plate in position



Use a cross-head screwdriver to fix the mounting plate to the back box in the wall. Now you can connect the white ribbon cable to the fascia.

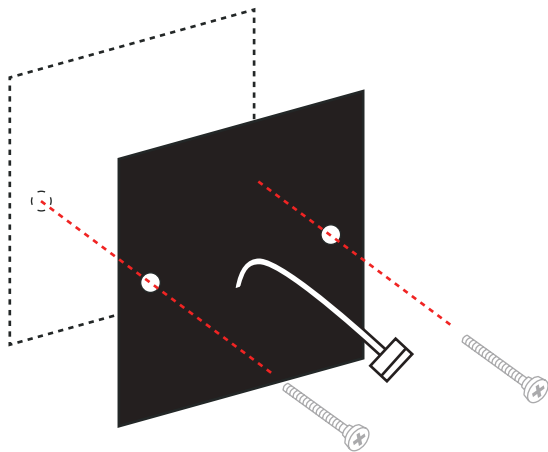

Installing your thermostat

7. Fix thermostat fascia in place

Locate the thermostat onto the mounting plate and push down to clip in place.

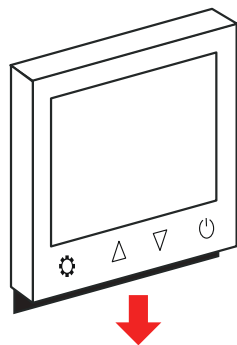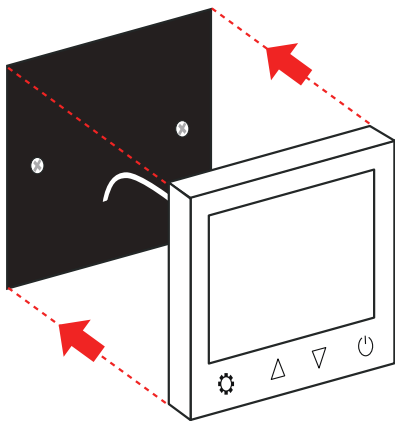

Installing your thermostat

10. Switching on your system

It is important that all adhesives and grouting is dry and fully cured before you switch on your underfloor heating.

Most adhesives take between 7 to 10 days to cure. Follow manufacturer guidelines.


The temperature of your underfloor heating should be increased gradually to avoid thermal shock in the floor. Start at 15°C and work up to your desired temperature 2-3°C per day.

Observe any maximum temperature guidelines from your floor manufacturer.



Wait for
7 - 10 Days
before you
switch on

User interface

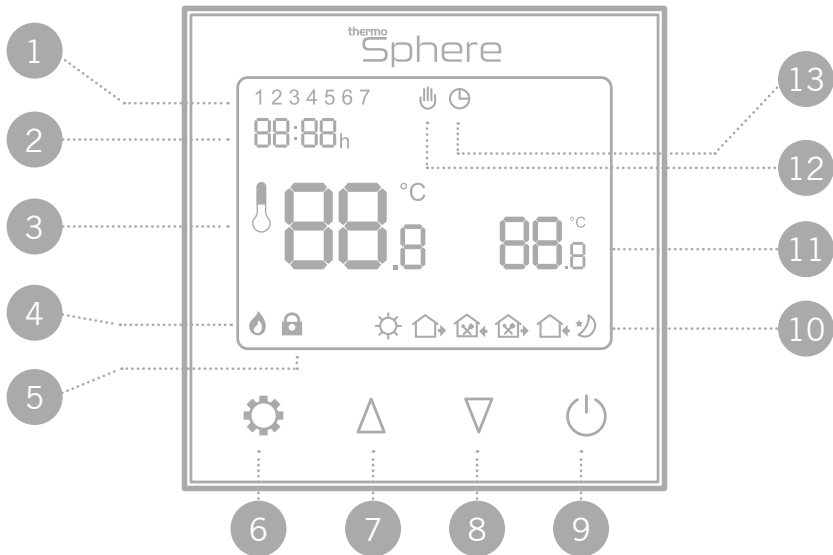


- | | | |
|-------------------------|-----------------|------------------------|
| 1. Day indicators | 6. Mode button | 11. Set temperature |
| 2. Time | 7. Up arrow | 12. Manual mode icon |
| 3. Measured temperature | 8. Down arrow | 13. Schedule mode icon |
| 4. Heating on icon | 9. Power button | |
| 5. Lock icon | 10. Event icons | |




Setup




Setting the day and time

Switch the unit off by pressing .

Press and hold  for 7 seconds until the time begins to flash.

Use  and  to select the correct minute.


Press  to switch to hours and use  and  to select the correct hour.

Press  again to edit the day and use  and  to select the correct day. 1 = Monday & 7 = Sunday.

Press  to save your settings.

NOTE: The thermostat will switch off after 30 seconds of inactivity and any unsaved settings may be lost

Heating modes

When your thermostat is on you can tap  to switch between Manual and Schedule heating modes.

Manual mode

Your thermostat will simply maintain the temperature you set manually until you ask it to do something else!

Schedule mode

Your thermostat will follow a heating schedule that you can set up.

Temperature override

Temperature override







When the thermostat is in Schedule mode, running your heating timer settings, it is possible to manually override the temperature without adjusting the schedule or switching to manual mode.






You can adjust the temperature with the  and  arrows.







If you override the temperature while the thermostat is running the heating schedule, the new override temperature will be maintained until the next scheduled temperature change.




The thermostat will then revert to the preset heating schedule.

Set up your heating schedule

1. Turn the thermostat on by pressing .
1. Press  to switch to  mode before you start.
2. Press  to switch the unit off.
3. Press and hold  for 7 seconds to edit your schedule. If you have already set the clock press  x3 to skip it.

4. Use  and  to adjust the start time for event 1 and press  to save. Now use  and  to select the desired Comfort (or "On") temperature between 20 - 28°C depending on your floor finish*.

5. Press  to advance to event 2 and use  and  to select the desired time to switch to a lower temperature.
6. Press  to save. Now use  and  to select the desired Eco (or "Off") temperature between 16 - 20°C.

7. Press  to advance to event 3 and use  and  to select the desired time to switch to a higher temperature.



Event 1
Wake Up









Event 2
Out









Event 3
Home




Set up your heating schedule




8. Press  to save. Now use  and  to select the desired Comfort (or "On") temperature between 20 - 28°C.




9. Press  to advance to event 4 and use  and  to select the desired time to switch to a lower temperature.


10. Press  to save. Now use  and  to select the desired Eco (or "Off") temperature between 16 - 20°C.

11. Press  to advance to event 5 and use  and  to select the desired time to switch to a higher temperature.

12. Press  to save. Now use  and  to select the desired Comfort (or "On") temperature between 20 - 28°C.

13. Press  to advance to event 6 and use  and  to select the desired time to switch to a lower temperature.

14. Press  to save. Now use  and  to select the desired Eco (or "Off") temperature between 16 - 20°C.

15. Press  to activate your schedule and you're done!



Event 4
Out



Event 5
Home




Event 6
Sleep

TIP! If you don't want to use all of the available heating events you can skip one by setting the same temperature as the previous event.

Advanced settings

Adjusting the advanced settings

To access the settings, switch the unit off by pressing .

Press and hold  and  together for 7 seconds.

Press  to cycle between settings.

Use  and  to adjust the settings.

Switch the unit on by pressing  to save your settings.

Advanced settings



MENU	DESCRIPTION	RANGE	DEFAULT
01	Temperature calibration	-8°C ~ 8°C	0°C
02	Maximum set point	5°C ~ 80°C	35°C
03	Minimum set point	5°C ~ 80°C	5°C
04	Sensor mode	IN (Ambient), OUT (Floor), ALL (Ambient with floor limit)	OUT
05	Frost protection	5°C ~ 15°C or - (Off)	5°C
06	Floor temperature display	(ALL sensor mode only)	
07	Temperature limit	10°C ~ 80°C (ALL mode only)	35°C
08	Heating schedule setting	1234567 (7 days the same) 123456 (6 days the same +1) 12345 (5 days the same +2) No numbers - Program off	
09	Status after power failure	LA: On as before, OF: Off	LA
10	Factory reset	rE (yes)	
11	Backlight timer	10secs - 300secs (5mins)	20s
12	Backlight brightness level	1 (min), 2, 3, 4 (max)	4
13	Software version	5220: 5100, 5220A: 7020 5226: 7024, 5226A: 7025	


Technical data



Supply voltage	230V/240V 50/60Hz
Maximum load	16A
Backup storage	EEPROM (approx. 1 year backup)
Temperature range	5 ~ 80°C (0.5°C increments)
Accuracy	±0.5°C
Sensor rating	NTC 10kΩ @ 25°C
Consumption	2W
Warranty	3 years
IP rating	IP30
Width	85mm
Height	85mm
Depth	46mm (31mm in wall)

Factory reset & key lock

Locking the keys

To lock the keys press and hold  and  together for 7 seconds.

The  icon will appear when the keys are locked and the keys will not function.

To unlock the keys press and hold  and  together for 7 seconds.

Factory reset

Find menu item 10 in the advanced settings.

Press  and then press .

The thermostat will switch off and reset to factory settings after 10 seconds. This will totally erase the time, date, heating program and any adjusted settings.

thermo
Sphere

S-PROG-IG-01

ThermoSphere
Pattenden Lane
Marden
TN12 9QJ

0800 019 5899
hello@thermosphere.com
thermosphere.com

Excellence in heating solutions.