
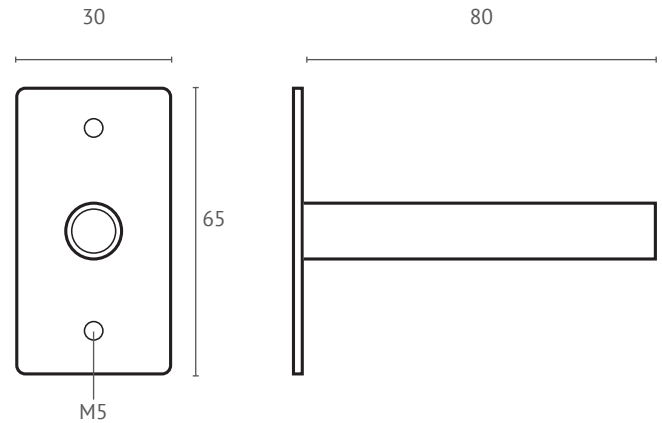


## Mounting spigot for Double Mount Towel Bars

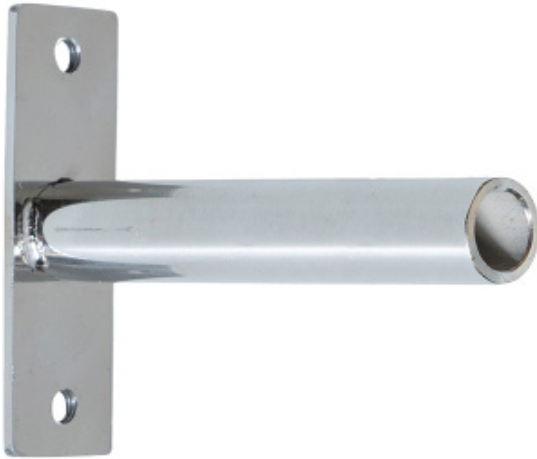

Use 2 spigots per bar to install ThermoSphere Double Mount Towel Bars with the patented ThermoSphere Mounting System.

- Speed up the installation of ThermoSphere Dual Mount Towel Bars by installing spigots and running wires before tiling.
- Must be installed on a mounting system or to a solid wall substrate before tiling.
- Maximum tiling depth over the spigot is 35mm. This ensures there is enough spigot to fix the towel bar to.
- Use 2 spigots per towel bar - one at each end.

### Technical data

|                     |                     |
|---------------------|---------------------|
| Code                | TBSD-800            |
| Compatible with     | Double mount bars   |
| Spigot Length       | 80mm                |
| Spigot diameter     | Ø12.7mm             |
| Plate width         | 30mm                |
| Plate height        | 65mm                |
| Plate thickness     | 2mm                 |
| Fixing hole centres | 48mm                |
| Fixing hole size    | M5                  |
| Weight              | 60g                 |
| Material            | 304 Stainless Steel |
| Warranty            | 10 years            |